

Media



Select Media Sources

- Menu
- 1
- Press Enter to start media mode
- Media source channel number
- Press Enter to select media source
- If source is in use, on-screen text will say "No Media Control". You can view media, but not control.*

Basic Source Control

- All Transport
- DVD Chapter, Frame
- Select, Menu, Top Menu
- LaserDisc Chapter, Frame
-
-

Chapter and Frame Control

- Menu
- 3 = Chapter
- 4 = Frame
- Enter
- Chapter or Frame number
- Enter to search
- For numeric entries, Ch- acts as backspace*
- 8 = Frame Step Reverse
- 9 = Frame Step Forward

Exit Media Event


- Menu
- 19 = Exit Event
- Press Enter to exit event
- This will release control of source to others, and switch to the TV's default channel.*

Media Center Call

- Menu
- 900 = Media Center Call
- Press Enter to alert media center

Media Control Guide

Administrator

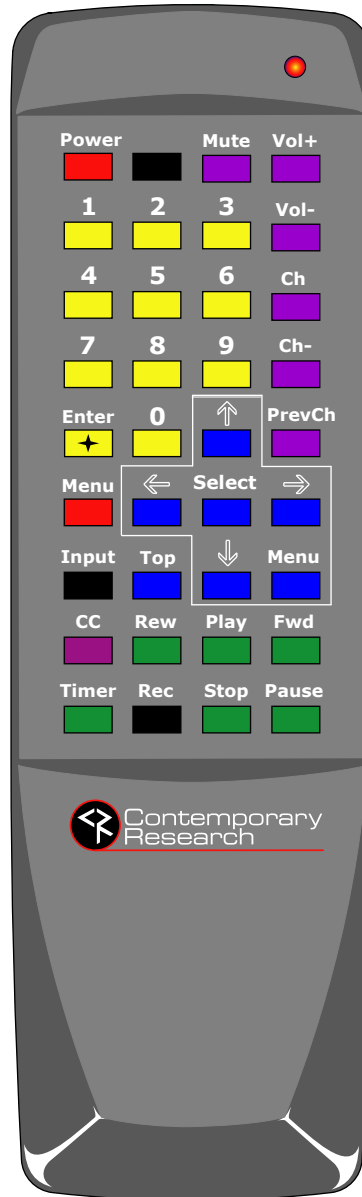

TV



Basic TV Control

- Power
- Volume Up, Down and Mute
- Closed Caption display

Select TV Channels and Inputs

- Channel +, -, or Previous
- Or enter number, then Enter to select directly:*
- TV Channel #
- 125 - Computer
- 126 - Composite Video
- 127 - S-Video
- Press Enter to select channel or input
- TV may not have all input options.*

Administrative Call

- Menu
- 911 = Call with onscreen text
- Press Enter to send call
- "Alert Sent" text appears onscreen*
- Menu
- 912 = Call without onscreen text
- Press Enter to send call
- No text appears onscreen*

Paging Commands

- Menu
- 18 = Send all TVs to Weather Channel
- 20 = Pages all TVs
- 21 = Page specific zone
 - Enter Zone # at onscreen prompt (1-15)*
- 22 = Page specific room
 - Enter room Device # at onscreen prompt*
- 25 - Send all TVs to specified channel
 - Enter channel # at onscreen prompt*
 - = Turns off all TVs
 - = Ends all Media events
- Press Enter to start Page